





Uniões entre Aros Fixos no sistema OS

OS-D+ | OS-Triple

EXEMPLOS NO SISTEMA OS - D+

EXAMPLES IN THE OS D+ SYSTEM

EXEMPLES DANS LE SYSTÈME OS D+

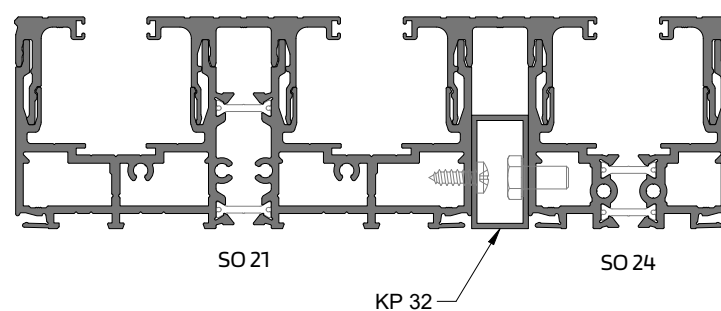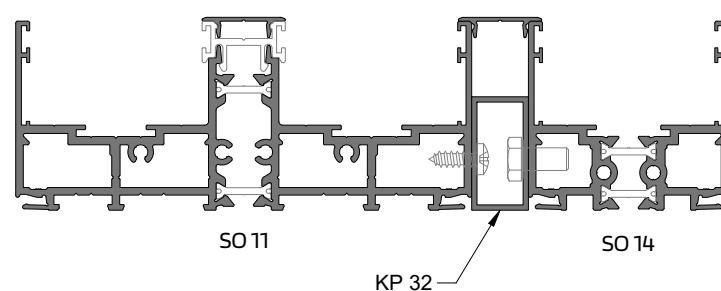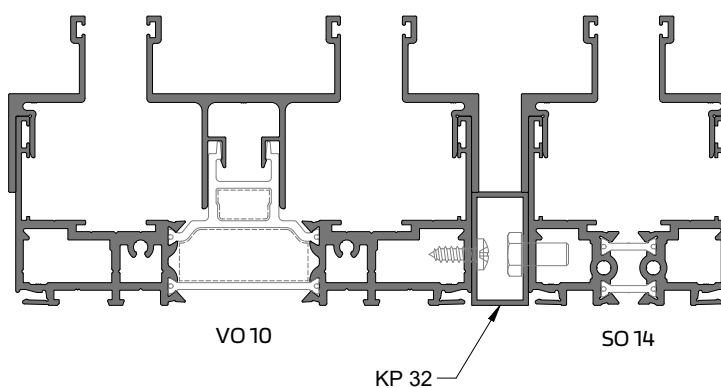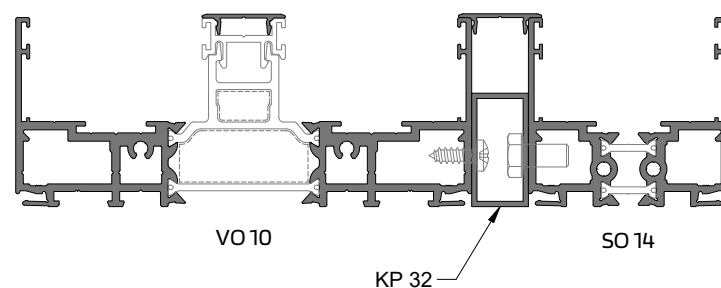





Uniões entre Aros Fixos no sistema OS

OS-D+ | OS-Triple

EXEMPLOS NO SISTEMA OS - TRIPLE

EXAMPLES IN THE OS - TRIPLE SYSTEM

EXEMPLES DANS LE SYSTÈME OS - TRIPLE

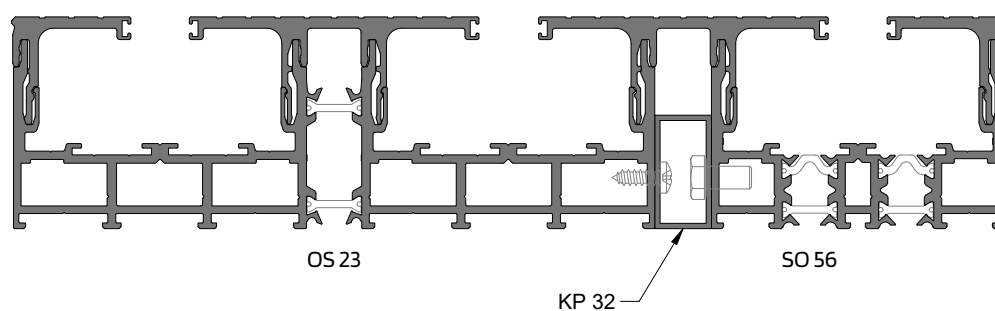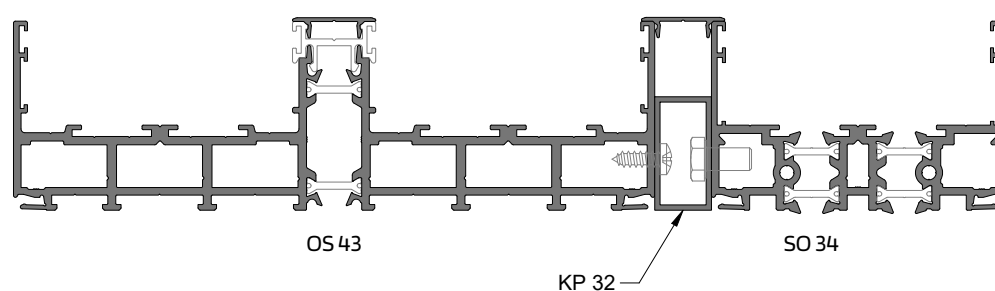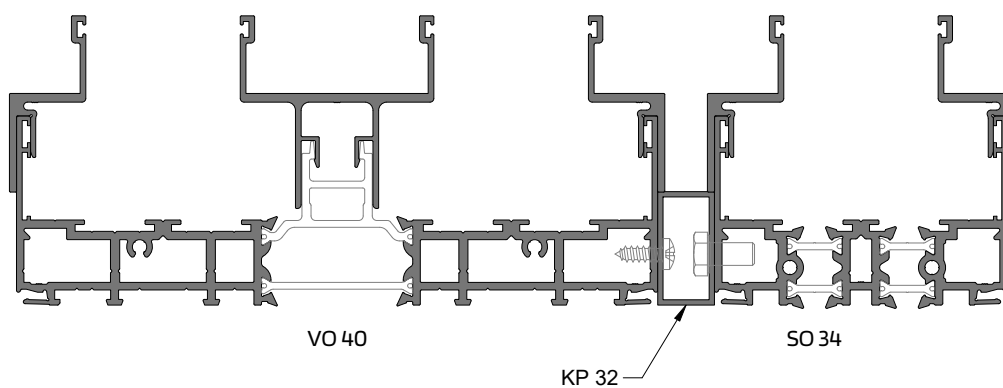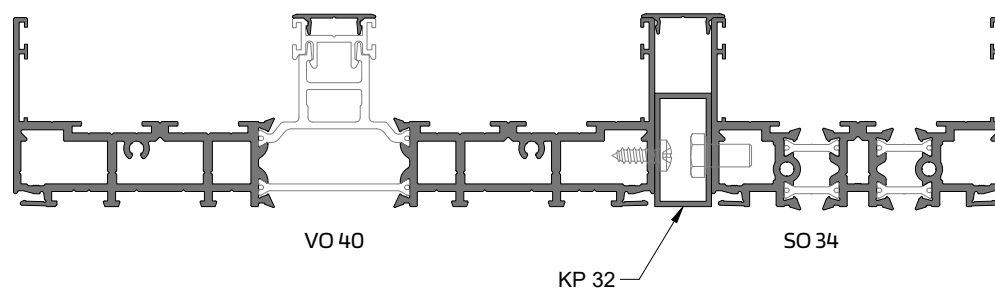





Unões entre Aros Fixos no sistema OS

OS-D+ | OS-Triple

MAQUINAÇÕES: PERFIL SO 14, KP 32 E VO 10

MACHININGS: SO 14, KP 32 and VO 10 Profiles

USINAGES: Profil SO 14, KP 32 et VO 10

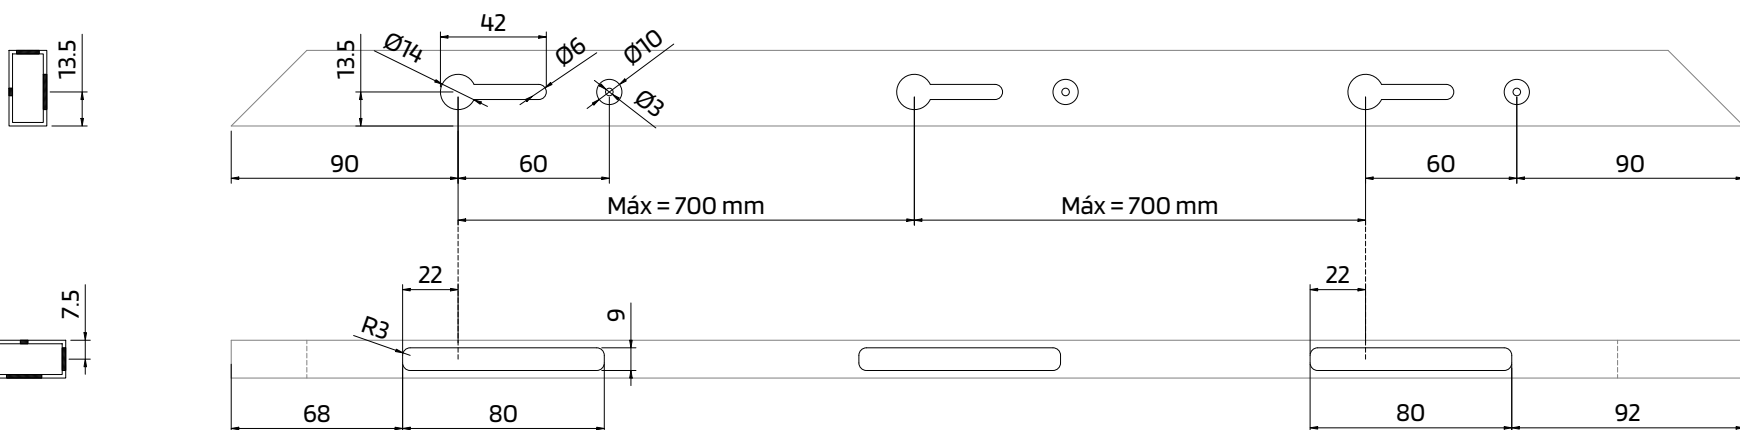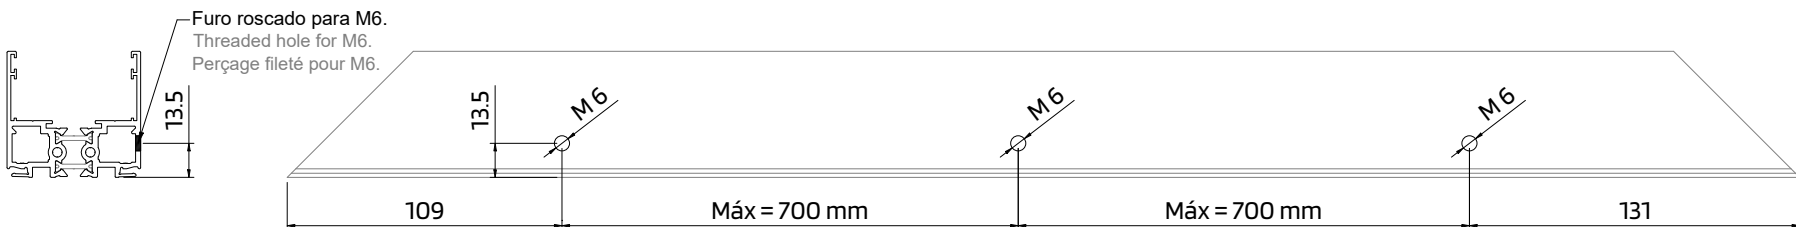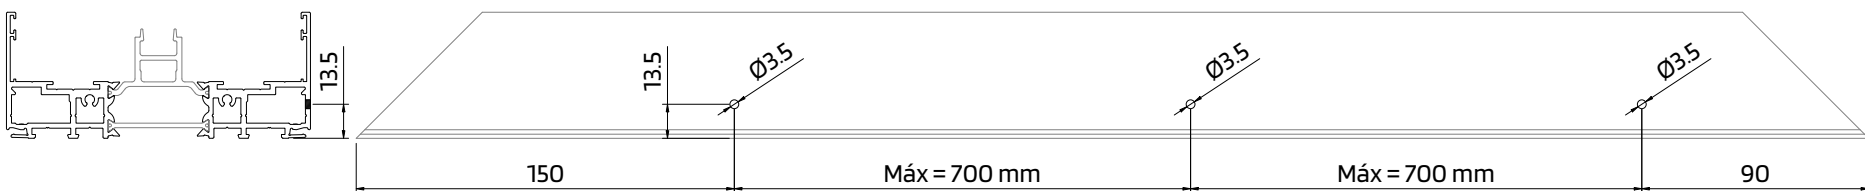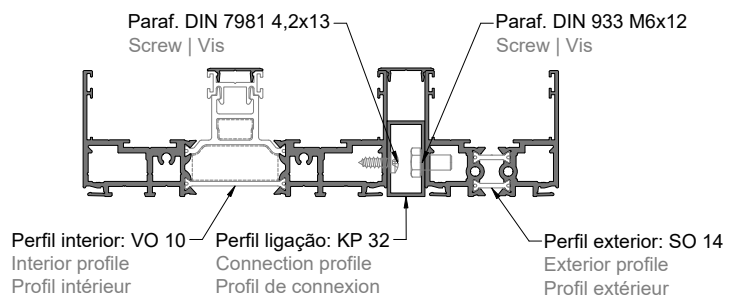


Uniões entre Aros Fixos no sistema OS

OS-D+ | OS-Triple

DRENAGEM
DRAIN WATER
DRAINAGE

Terá de ser considerada um esquema de Drenagem Inferior.
A Lower Slot Drain Water scheme will have to be considered.
Un système de drainage inférieur devra être envisagé.

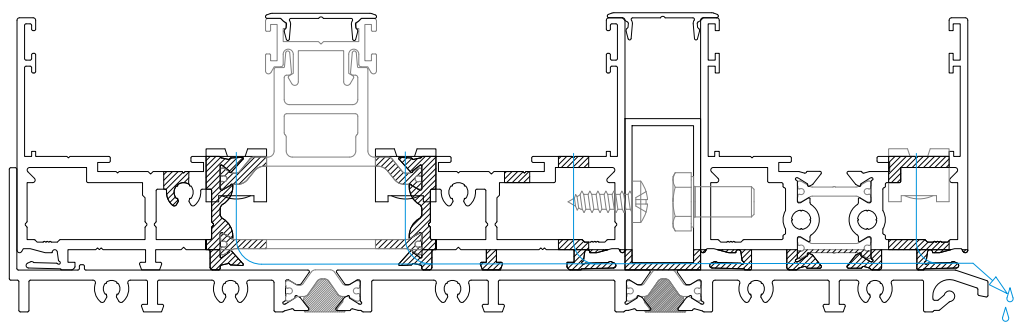

Fundamental garantir que os rasgos não são realizados no mesmo alinhamento (exemplo ilustrativo).

It is essential to ensure that the slots are not realised in the same alignment (illustrative example).

Il est essentiel de veiller à ce que les déchirures ne soient pas faites dans le même alignement (exemple illustratif).

